

VE3RIB Repeater Commands

Club Member Version

(Revised 16 March 2017)

DTMF	Link Commands	Note
701	Link 1 on (IRLP)	1 3
710	Link 1 off	1
505	Turn off all links	1
506	Turn on all links	
1 Link will reconnect after 60 minutes.		
2 On connect, will link to Reflector 9021.		
3 Generally, leave this link on, and use IRLP command 73 to disconnect.		
DTMF	Misc. Reporting Commands	Note
C1	Report current time	
C2	Report internal and external temperature	
C3	Report power output to main radio	4
C4	Report main battery voltage	
4 This function is not currently calibrated.		
DTMF	Autopatch Commands	Note
*	Dial autopatch	5
#	Hangup	
5 Enter * then phone number or speed-dial number		
DTMF	Diagnostic Commands	Note
A1	Signal test	
A2	Report IRLP status	5
B	Keypad (DTMF) test	
003	Recall transmit crosspoints	
004	Recall receive crosspoints	
009	Recall all crosspoints	
5 This macro will only run if Link 1 (IRLP) is enabled.		

Atikokan Amateur Radio Club Speed-Dial List

Name	Callsign	#		Name	Callsign	#
Vic	VE3AKX	001		Erik	VE3ENL	010
Warren	VE3FYN	002		Chris	VA3UOD	013
Jason	VE3PEJ	004		Nick	VE3SEF	014
Paul	VA3JSV	005		Carol	VE3COU	016

Atikokan Amateur Radio Club Emergency Numbers

Shortcut	Autodial
091	911 Emergency
000	0 Operator
401	Atikokan OPP non-emergency (This will forward to 911 during off-hours)
402	N/C
403	Atikokan Ambulance non-emergency
404	Atikokan General Hospital non-emergency
405	Atikokan Public Works (foreman on call)
406	CanWarn Weather
407	Current Highway Conditions