

## VE3RIB / VE3UPP Repeater Commands

Public Version (Revised 16 January 2012)

VE3UPP	VE3RIB	DTMF	Link Commands	Note
X	X	701	Link 1 on (VE3UPP)	
X	X	710	Link 1 off	1
X	X	704	Link 4 on (IRLP)	2
X	X	740	Link 4 off	1 3
X	X	505	Turn off all links	1
X	X	506	Turn on all links	
1	Link will reconnect after 60 minutes.			
2	On connect, will link to Reflector 9031.			
3	Generally, leave this link on, and use IRLP command 73 to disconnect.			
VE3UPP	VE3RIB	DTMF	Misc. Reporting Commands	Note
	X	C1	Report current time	
	X	C2	Report internal and external temperature	
	X	C3	Report power output to main radio	4
	X	C4	Report main battery voltage	
4	This function is not currently calibrated.			
VE3UPP	VE3RIB	DTMF	Autopatch Commands	Note
	X	*	Dial autopatch	5
	X	#	Hangup	
5	Enter * then phone number or speed-dial number			
VE3UPP	VE3RIB	DTMF	Diagnostic Commands	Note
	X	A1	Signal test	
X	X	A2	Report IRLP status	5
X	X	B	Keypad (DTMF) test	
X	X	003	Recall transmit crosspoints	
X	X	004	Recall receive crosspoints	
X	X	009	Recall all crosspoints	
5	This macro will only run if Link 4(IRLP) is enabled.			

## Atikokan Amateur Radio Club Emergency Numbers

Shortcut	Autodial
091	911 Emergency
000	0 Operator
401	Atikokan OPP non-emergency
402	Atikokan Fire Hall non-emergency
403	Atikokan Ambulance non-emergency
404	Atikokan General Hospital non-emergency
405	Atikokan Public Works (foreman on call)
406	CanWarn Weather
407	Current Highway Conditions